

the shaft and prevent its removal. If burrs or nicks have formed, polish up the motor shaft. Remove the arbor and laps. Hold a piece of 0000 (or finer) steel wool up to the motor shaft while the unit is running. Work down the imperfections and then wipe the shaft clean and apply a thin coating of Inland MotorShaft Lubricant, no. 50028 or petroleum jelly.

- Removing the laps and arbor after use will prevent them from seizing.
- Check the power cord periodically for cuts or damage.
- Check all coolant lines and tubes to see that they are not clogged.

#### Convertible Motor Unit

Variable Speed Motor Unit  
 Permanent Magnet DC motor, rectified for AC outlets  
 Max Torque: 48 oz-in / Max RPM: 2800  
 Shaft OD: .312" (5/16") Stainless Steel  
 Available in 115V or 230/240V models

#### Product Specifications

#### Flat Lap Machine

Work Surface: 10" x 11"  
 Height: 7"  
 Maximum Lap Diameter: 8"

#### Parts and Accessories

**Diamond Laps:** Our 6" and 8" laps are require use of a master lap and are available in 60, 100, 170, 275, 325, 600, 1200, and 3000 grit diamond. They have a 1/2" arbor hole for affixing to the master lap.

**Master Lap:** 6" or 8" acrylic blank for added stability. Use a single master lap with any number of diamond laps of that size interchangeably or choose to set up each diamond grit with its own master lap.

**Felt Polishing Pad:** 6" or 8" durable wool felt pads accept most polishing media including cerium, tin and aluminum oxides, diamond powders, and rouges. PSA back keeps them flat on a master lap. Approximately .060" thick with a 1/2" arbor hole.

**Polishing Powder, no. 50037:** Jar of specially ground cerium oxide, ground to nearly half the size of standard cerium oxide, gives virtually any of your cabs a high polish. Also works great on glass.

**Diamond Compounds:** Assorted grits of highly graded diamond suspended in a latex base for consistent dispersal. Five carats of diamond in a five gram syringe.

**Trim Saw Conversion Kit, no. 10675** Convert the SwapTop Grinder / Shaper into a wet operating trim saw with a 6½" diamond blade. Inland no. 10675.

**Grinder / Shaper Conversion Kit, no. 10655:** Converts any SwapTop™ Table Saw into a diamond grinder / shaper.

#### Service

Questions about your grinder can be answered by visiting the Inland Craft web site at [www.inlandcraft.com](http://www.inlandcraft.com), watching our online videos at [www.inlandcraft.com/videos](http://www.inlandcraft.com/videos), by emailing Customer Service at [helpdesk@inlandcraft.com](mailto:helpdesk@inlandcraft.com) or by calling Inland Customer Service at 1-800-521-8428 Monday through Friday, 9:00 am to 5:00 PM EST.

**Inland Craft Products, Co.**  
 808 Burr Oak Dr.  
 Westmont, IL 60559 - USA  
[www.inlandcraft.com](http://www.inlandcraft.com)



## SwapTop™ Flat Lap Machines


### Users Guide

Thank you for buying this Inland product. Please read all the instructions to understand the correct components, set up, and use of your machine.

### Safety

- **Always** wear safety glasses or goggles.
- Plug into a grounded electrical system. **Do Not** override the grounding system.
- **Always** unplug your machine when switching between set-ups, installing laps, and making adjustments.
- Place on a sturdy, level, water tolerant surface at a comfortable working height.
- **Never** operate with guard covers and safety features removed or disabled.

### Parts List

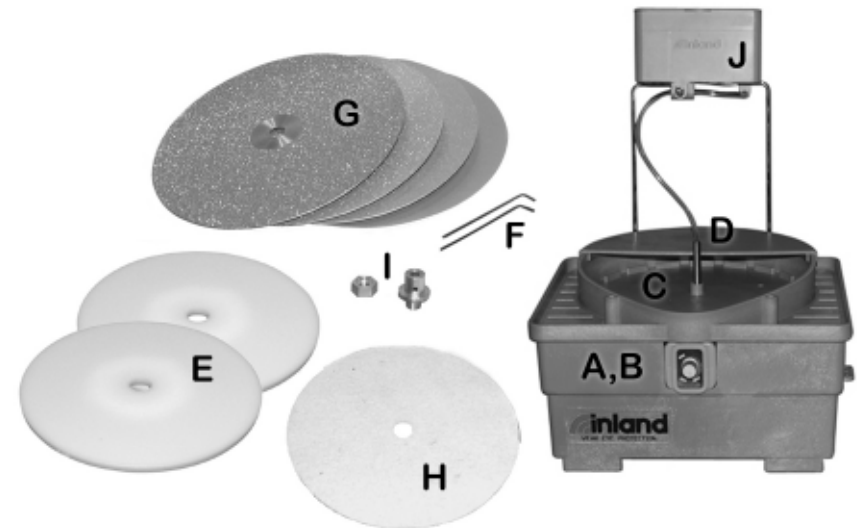



Name	Qty	10680
A Machine Base	1	yes
B Motor Unit (shown installed)	1	yes
C Removable Reservoir	1	yes
D Drip Guide / Cover	1	yes
E Master Lap	2	6"
F 5/64" Allen Wrench	2	yes
G Diamond Laps	4	6"
H Polishing Pad	1	6"
I Brass Arbor & Nut	1	yes
J WaterDrip System	1	yes
Drain Tubing (not shown)	1	yes
14,000 Grit Diamond Compound (not shown)	1	yes

## Swapping the Tops

1. Unplug the machine.
2. Turn off and disconnect the water feed from the disc cover.
3. Remove all laps and discs installed.
4. Drain any coolant from the reservoir and wipe dry.
5. Push in on the spring loaded latches to release the top from the base and then lift straight up to remove.
6. Follow the instructions provided in the conversion kit to install it on to the base.

## Setting Up the Flat Lap

1. If your machine is set up for sawing, remove the entire table saw top, blade and blade arbor. You should have just the open base with yellow motor unit. If your machine was set up as a grinder / shaper remove the splashguard, sponge, and diamond grinding head and proceed to step 3.
2. Position the yellow motor unit in the base with the motor shaft vertical. Press down on the unit slowly, yet firmly until you feel it seat into the base.
3. Install the reservoir. Make sure the spring loaded latches on each side snap into place. You should be able to lift the entire unit by the top.
4. Set up WaterDrip AddOn Kit following the instructions included with it.
5. Connect the overflow drain hose to the outlet on the bottom rear of the base. Place the end in an appropriate receptacle (not provided) to collect the overflow as the reservoir fills with water.
6. Flat laps are mounted with the brass nut and arbor. Position the diamond lap onto the arbor, add the acrylic master lap next, and then the nut is mounted with the unthreaded internal shoulder facing away from the master lap. Make sure the diamond lap and master lap are properly centered and then tighten the nut.
7. The arbor is then placed onto the motor shaft with the diamond surface on top. Lower until it hits the bottom and then raise it up 1 - 2 mm to prevent the arbor from wearing away the motor shaft tube. Secure in place with the 5/64" allen wrench by tightening the screw against the flat part of the motor shaft.
8. The drip guide / cover is set in place and then plug the coolant feed hose in to the nipple of drip guide.
9. Your machine has a built in speed control unit controlled by the on / off switch found on the front of the machine. Plug the motor unit cord into an appropriate grounded wall outlet.

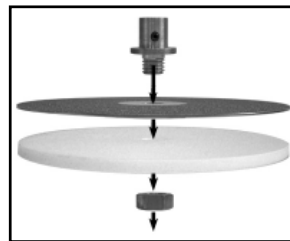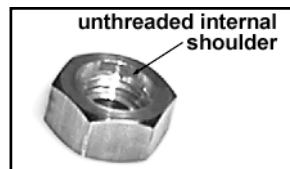

## Grinding with the Flat Lap

1. Your machine can run 6" or 8" laps, or both. If you started with a 6" machine, you can purchase and then use 8" laps, or vice versa.
2. Never grind any material without water cooling on the diamond tool. This will keep down dust and debris, and maximize the life of your diamond laps. A water-soluble cutting additive, such as Inland's Diamond Coolant™, no. 50011 can be added if you wish.
3. The lap height **SHOULD BE** below the splash walls for normal use, but you can move it above the splash walls for occasional needs where the item being ground is larger than the space inside the splash walls.
4. Open the metal drip control screw just a little bit, perhaps a quarter turn. You only need a drop of water every second or two to keep the diamond tools clean and cool. However, using "too much" water will not harm a thing. If you are using a plastic tray instead (or additionally) watch it for excess liquids also.
5. Turn the speed control knob to about 3 o'clock to start grinding. **NOTE:** The machine will pulse at levels which are too slow for proper diamond tooling and using diamond tooling at these low speeds will cause the diamonds to wear out much more quickly.
6. For softer materials, that halfway mark might be as fast as you ever go. With harder materials, large stock removal, and more experienced "hands", you can experiment with faster motor speeds. If you increase motor speed, you must also make sure that you are supplying enough water to the diamond tools. If powder is ever noticeable, you should increase the water supply immediately.
7. To get the most out of your diamond laps, remember to utilize the entire surface when grinding. For example, you can go right up to the outside edge of the lap when you are grinding the outside diameter of a cabochon. Because of the higher surface speed on the outside of the lap, you can more quickly shape the outside edge of a cabochon. Alternately, softer materials like silicates (glass), would fare well utilizing the slower surface speeds of the inner "edge" of the diamond laps.



## Speed Control Motor Feature

The integrated speed control feature on the front of the motor allows you to adjust the lap speed. As a general rule, grind at slow speeds and polish at faster speeds. When using the 8" machine we strongly advise you not go beyond 3/4 speed as you just eat up the material you are trying to "gently" remove.

## Maintenance

- Always unplug the unit when cleaning. We recommend draining any remaining coolant and rinsing out the reservoir of the work surface.
- **NEVER** allow the yellow motor unit to get wet or immerse it in water. Use a vacuum to remove any debris from the bottom air vents on the unit.
- Always secure the arbor to the flat side of the motor shaft. Failure to do so can scar